


USER MANUAL

XFile3

Version 1.0 - July 2013

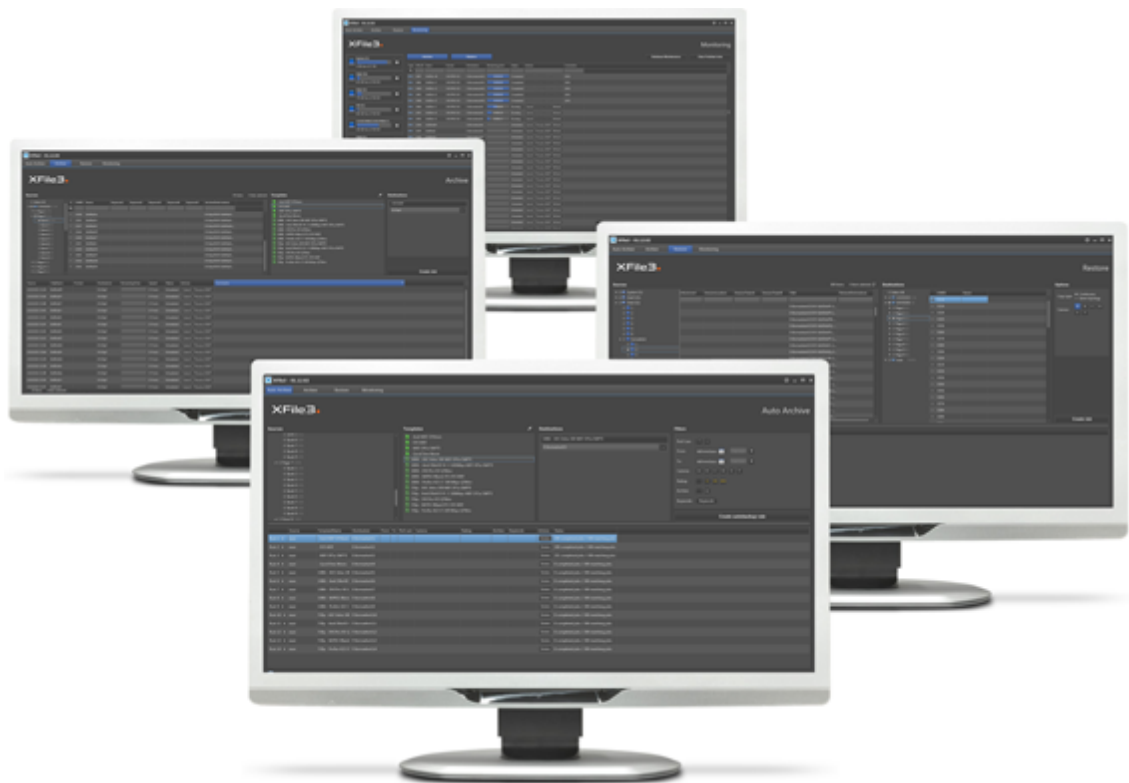

XFile3.

Copyright

EVS Broadcast Equipment S.A. – Copyright © 2003-2013. All rights reserved.

Disclaimer

The information in this manual is furnished for informational use only and subject to change without notice. While every effort has been made to ensure that the information contained in this user manual is accurate, up-to-date and reliable, EVS Broadcast Equipment cannot be held responsible for inaccuracies or errors that may appear in this publication.

Improvement Requests

Your comments will help us improve the quality of the user documentation. Do not hesitate to send improvement requests, or report any error or inaccuracy on this user manual by e-mail to doc@evs.com.

Regional Contacts

The address and phone number of the EVS headquarters are usually mentioned in the Help > About menu in the user interface.

You will find the full list of addresses and phone numbers of local offices either at the end of this user manual (for manuals on hardware products) or at the following page on the EVS website: <http://www.evs.com/contacts>.

User Manuals on EVS Website

The latest version of the user manual, if any, and other user manuals on EVS products can be found on the EVS download center, on the following webpage: <http://www.evs.com/downloadcenter>.

Table of Contents

TABLE OF CONTENTS	III
1. INTRODUCTION	1
1.1. About XFile3	1
1.2. Requirements	1
1.3. Compatibility	2
2. INSTALLATION AND LICENSING	3
2.1. Software Installation	3
2.2. Licensing	7
3. XFILE3 APPLICATION	9
3.1. Startup	9
3.1.1. Startup	9
3.2. Auto Archive Mode	10
3.2.1. Auto Archive Overview	10
3.2.2. Sources Zone	11
3.2.3. Templates Zone	12
3.2.4. Destinations Zone	13
3.2.5. Filters Zone	13
3.2.6. How to Create an Autobackup Rule	16
3.2.7. Job Zone	17
3.3. Archive Mode	20
3.3.1. Archive Overview	20
3.3.2. Source Zone	22
3.3.3. Templates Zone	24
3.3.4. Destinations Zone	25
3.3.5. How to Create Archive Jobs	26
3.3.6. Job Zone	26
3.4. Restore Mode	29
3.4.1. Restore Overview	29
3.4.2. Sources Zone	30
3.4.3. Destinations Zone	32
3.4.4. Options Zone	34
3.4.5. How to Create Restore Jobs	34
3.4.6. Job Zone	35
3.5. Monitoring Mode	37
3.5.1. Monitoring Overview	37
3.5.2. Hard Disk Zone	38

3.5.3. Job Zone	40
3.6. About Window	44

1. Introduction

1.1. About XFile3


The purpose of this product is to automatically archive selected content from EVS servers to the transportable hard drives and enable restoring content from hard drives to EVS servers.

The main users for XFile3 are:

- LSM operators.
- Producers and LSM Operator assistants.
- Technical truck engineers.
- Other Production users who manage archive and restore.

The overall workflow implies two roles:

1. Archive existing clips from EVS servers to hard drives.
2. Restore existing files from hard drives to EVS servers.

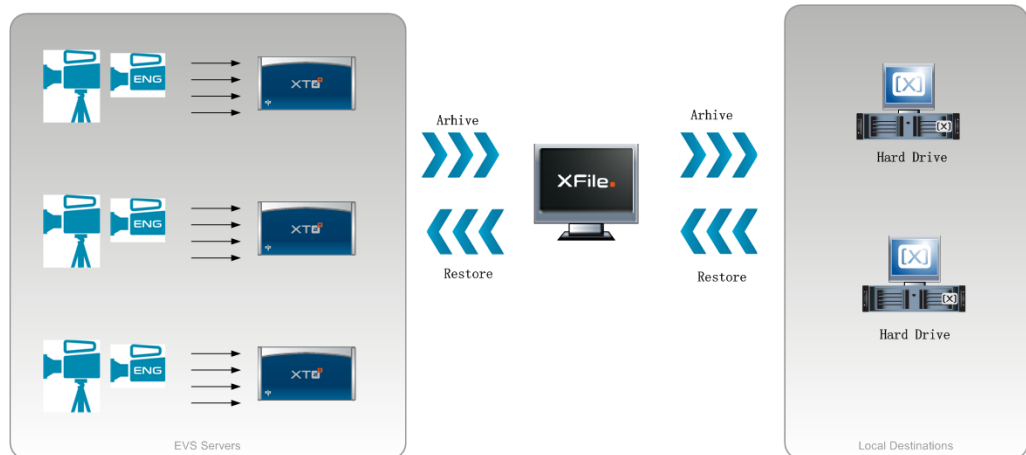

1.2. Requirements

Software Requirements

- Gigabit Ethernet connectivity (up to 10GB Ethernet)
- Microsoft.Net Framework 4.0
- Supported Multicam Versions: 11.02.X

Hardware Requirements

- EVS XF[2] System

- OS: Window7 64bits or 32-bits
- Bi-Core CPU

Workflow Requirements

- It is advised to verify that the XSquare services are fully running before launching XFile3 operational software.

1.3. Compatibility


- XSecure V1.01.05
- XSquare V2.1.20
- XViewer V1.0.0

2. Installation and Licensing


2.1. Software Installation

To install XFile3, proceed as follows:


1. Run XFile3 installation package and then follow the steps of the Setup wizard and click **Next**.

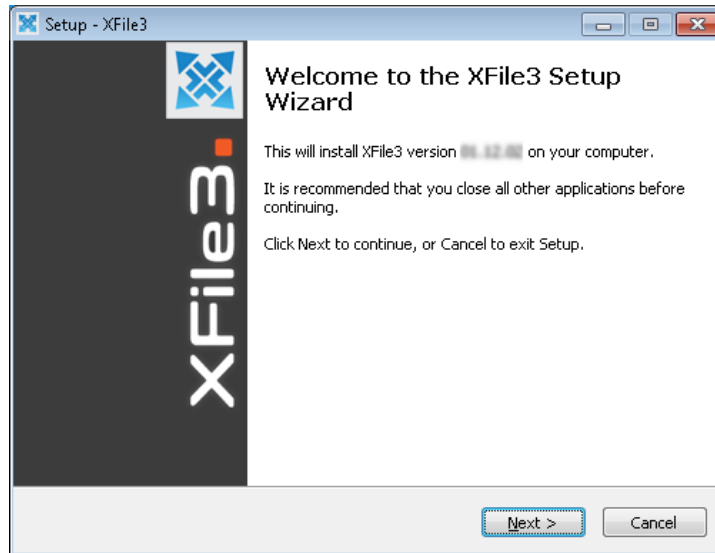


2. Select "I accept the agreement" and click **Next**.

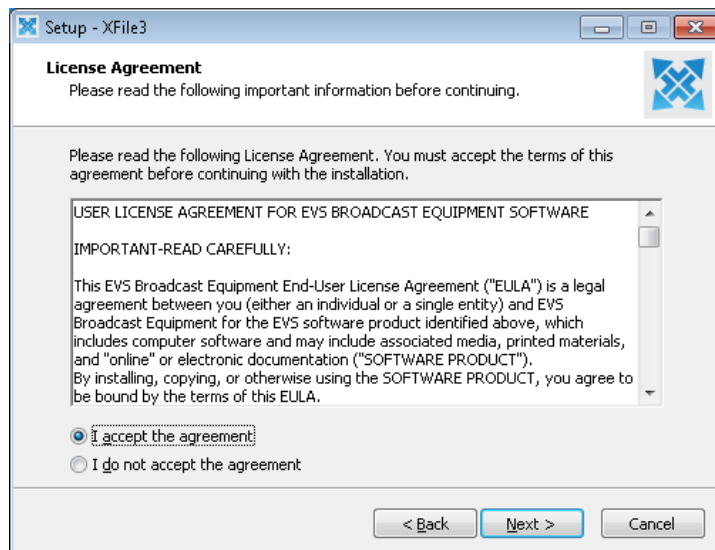


3. Select the destination directory to install the new software application and then click **Next**. The installer proposes a default path for the installation. i.e.: C:\Program Files (x86)\EVSBroadcast Equipment\XFile3.

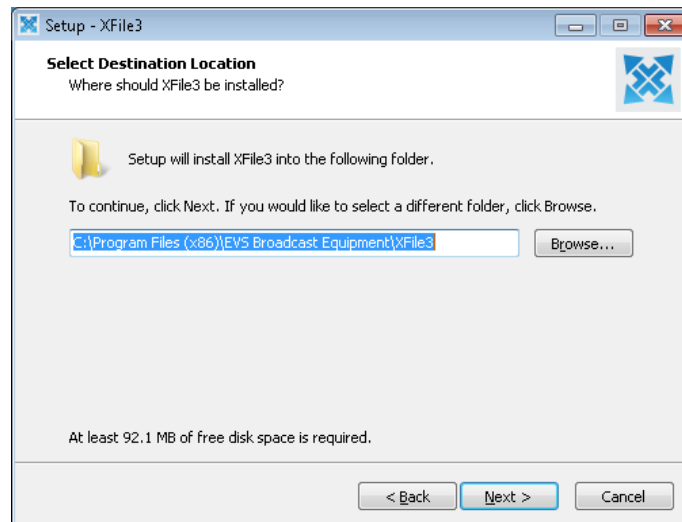


4. Select either mode to install. Two modes are available: Full install mode and Advanced install mode.
- Select Full install mode, all the components will be installed in Silent mode automatically.
 - Select Advanced install mode, you can customize the components to be installed.
- The following steps are the installation process after selecting Advanced install mode.

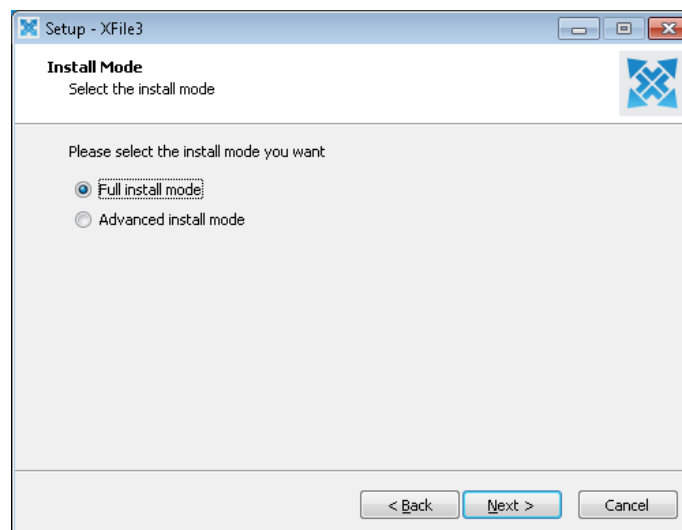


5. Select the components to install, and then click **Next**. If you need to update XFile3 only, you can unselect the other three components and click **Next**.

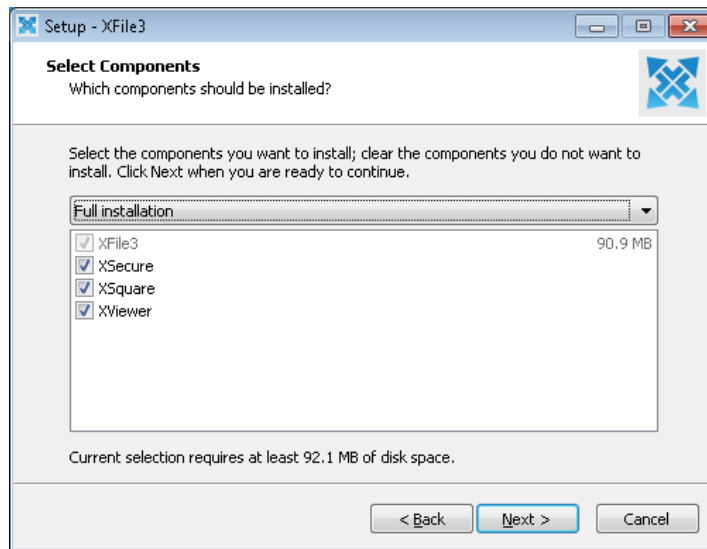


6. Click **Browse** to select a folder in which XFile3 shortcuts are saved, and then click **Next**.

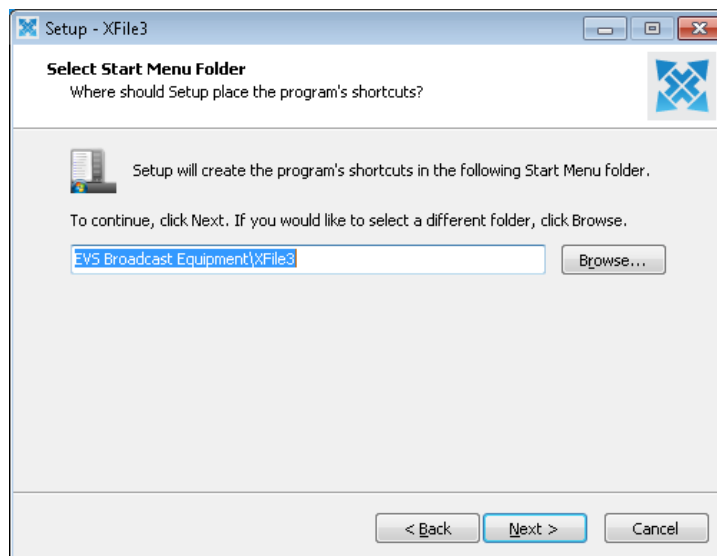


7. Select **Create a desktop icon** to create a shortcut on the desktop, if unselect, the shortcut won't display on the desktop.
Click **Next**.

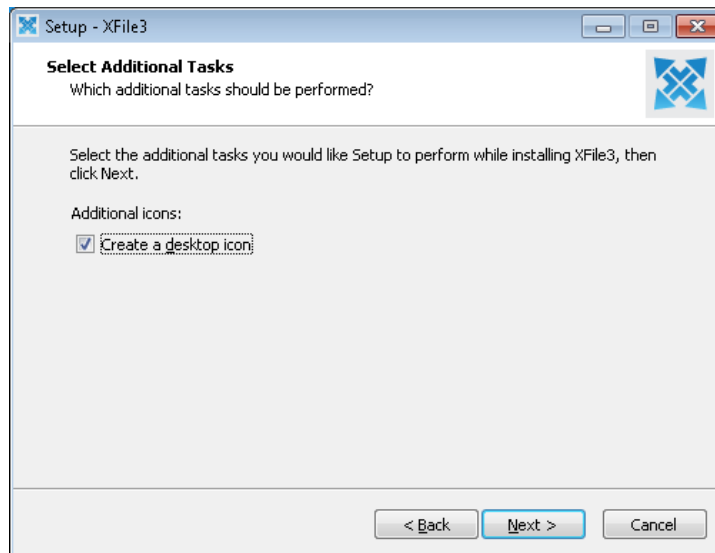

8. Click **Install** and wait until the installation is completed. This can last a couple of minutes. After that, install XSquare Suite.

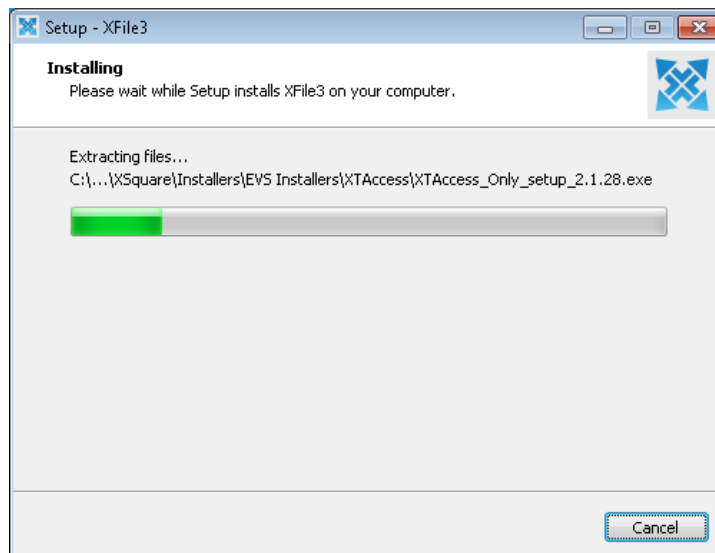

9. Select the first option to restart your computer now or select the second option to restart your computer later. The first option is highly recommended.
- And then click **Finish** to finish installation.

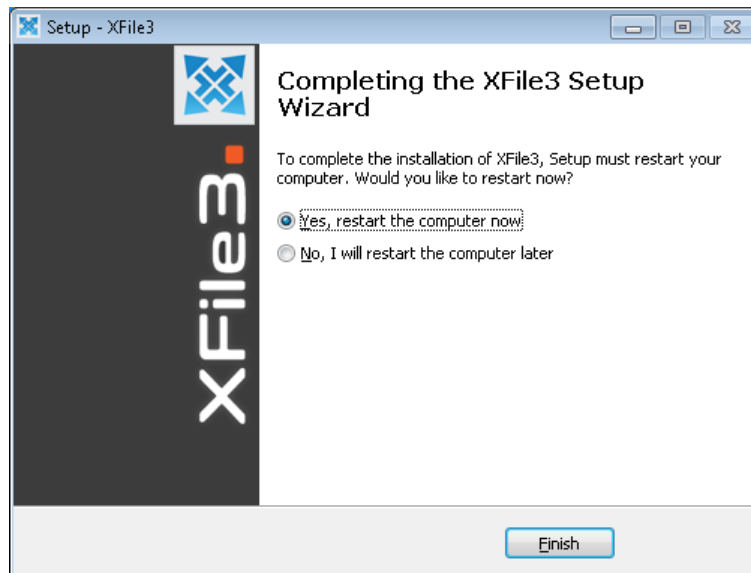

All applications are installed successfully.

2.2. Licensing

The XFile3 software is managed by way of licenses codes managed with the XSecure application. The required license codes for XFile3 are the following:

Application	Module	Summary
10 XFile	10 Base Module	XFile3 User Application
60 XTAccess	10 Base Package	Background XTAccess transfer agent
60 XTAccess	20 Transcoding	Background XTAccess transcoding engine
170 XViewer	10 Base Package	File Viewer Application Module

When you need to add a new license code, or extend the validity of a temporary license code, you must use the XSecure Manager application.

To add a new license code, proceed as follows:

1. Run the XSecure Manager application by double-clicking the XSecure Manager shortcut on your desktop as administrator.
2. Requesting license codes.
 - a. Fill in the Customer information.
 - b. Click on the **Request** button in the lower left corner of the window. This will generate an XML file that you must send to your EVS support representative
 - c. Select the location where you would like to save that file, and click on the **Save** button.
 - d. Send this file to your support contact at EVS support representative, specifying which new license codes or license code extensions you require.
3. Adding License codes.

- a. After received another XML file containing the license codes or code extensions that you have requested. Copy that XML file in a directory that is visible by the computer where XSecure is installed (using a USB key for instance, or your LAN network)
- b. Click on the **Import Key File** button in XSecure window. The license codes will be automatically imported, and a dialog box confirms how many license codes have been successfully imported.

XSecure Manager version 1.01.05

Identification

System ID: GN5D-ZX5-608-CNC Serial Number: 25570

Customer Information

Company: NBS
 First Name: Ily Last Name: Ily
 Email Address: Ilyang@nbsystems.fr
 Phone Number:
 Computer Description: NEXT-PC

Warning
 Note : this form must be filled in on the computer where the EVS application will be used

License List

Application	Module	Type	From	To	Code
10 - XFile	10 - Base Package	TEMP GLOBAL	see global	see global	Q2W72P0M1W-KN2Vb-TC6M-608
60 - XTAcess	10 - Base Package	TEMP GLOBAL	see global	see global	MmE9-CHVH2-K99b-W10A7-zBQ
60 - XTAcess	20 - Transcoding	TEMP GLOBAL	see global	see global	Ujmo1-CH6CZ-aNG7b-BCIAN-602
120 - XFly Streamer	10 - Base Package	TEMP GLOBAL	see global	see global	8JkH-DY8w-K0LLa-K1020-09vnc
130 - Xsquare	10 - Base Package	TEMP GLOBAL	see global	see global	3m74-Da62-erG5a-e1Bc9-3ppfw

Global Expiration Date: 25 NOV 2013

Operations

2 **Request** Select this option to generate a License Request File that must be sent by e-mail to your EVS support representative. Then you will receive a License Key File to activate your application.

3 **Import Key File** this option to import the License Key File sent by EVS and activate the corresponding licenses.


Manually type the license key here, then click on "Load" to activate the corresponding license.

Load Quit

3. XFile3 Application

3.1. Startup

3.1.1. Startup

Double click the XFile3 icon  to open the application. This opens an initialization window.




The startup sequence will check the status of the background XSquare services as well as discover the available EVS XT and XS Servers on the same network as the XFile3 host computer.

The Auto Archive Mode is selected by default at startup.

If you re-launch XFile3 after auto-archive rules have been created, you are asked to make a choice to continue using the previous rules or clear them and start without any rules by way of a pop up window:


Do you want to carry on using the same auto archive rules?

- Click **Yes** to use the same auto archive rule, the old rules are retained.
- Click **No** to remove the existing auto archive rules.

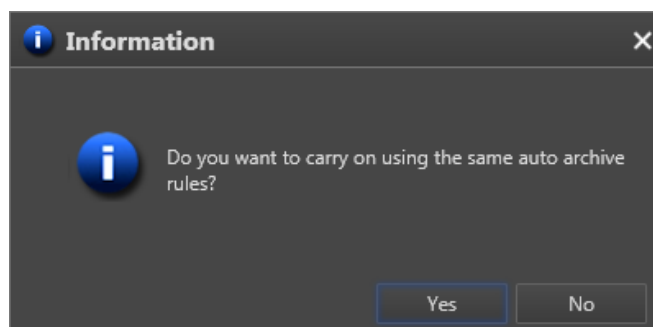

Afterwards, pop up window will appear asking: The jobs in rule will be canceled, are you sure to continue?

- Select **Yes** to cancel all the existing jobs in rule and open XFile3.
- Select **No** to open XFile3, the old rule is existing.

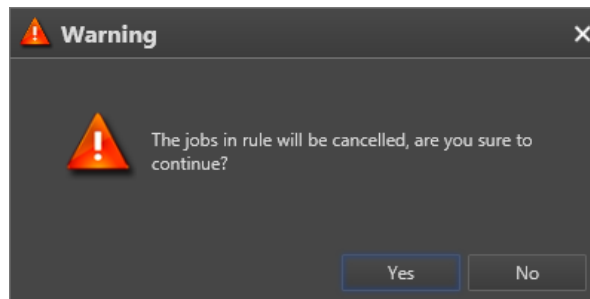

3.2. Auto Archive Mode


3.2.1. Auto Archive Overview

Auto Archive mode is the default page after startup.

Auto Archive Mode is to automatically archive the source clips from the requested servers in the requested formats based on rules.

Click **Auto Archive** to enter AutoArchive mode.


The screen shot below shows various areas of the Auto Archive Main Window.

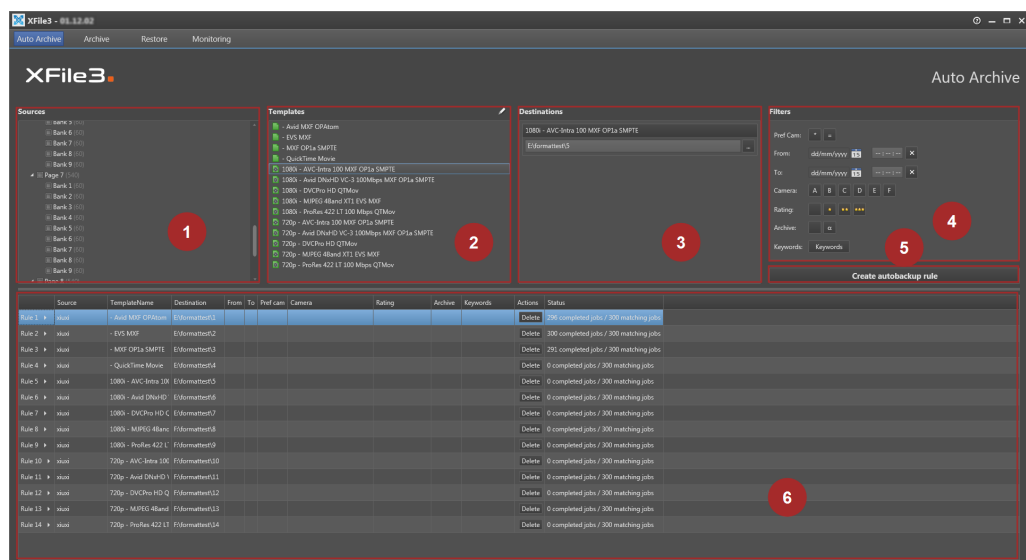

Area	Name	Description
1	Sources Zone	Area that displays all the detected servers and their clip structure, including pages and banks.
2	Templates Zone	Area that displays the templates available from the background running XSquare service manager.
3	Destinations Zone	Area that displays all the destinations relative to the selected template.

Area	Name	Description
4	Filters Zone	Area that displays all the filters options to add in the autobackup rule.
5	Create autobackup rule	Button to create the autobackup rule.
6	Job Zone	Area that displays all the created rules and all the job status

3.2.2. Sources Zone

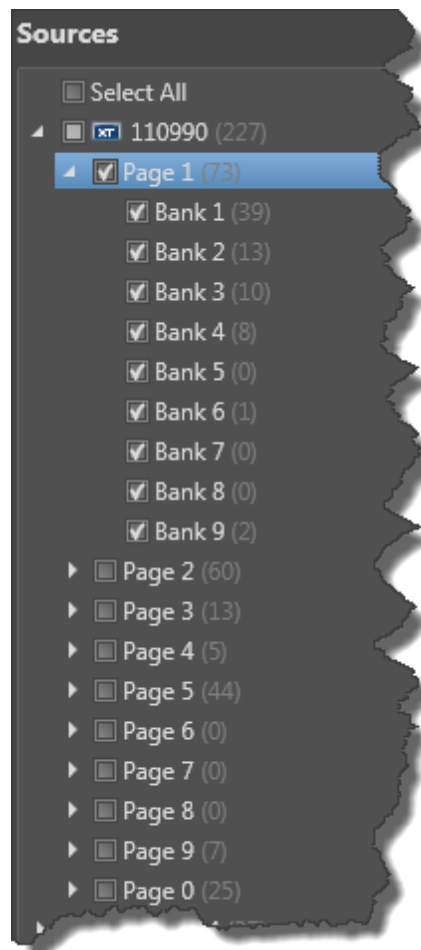

The Sources Zone includes the following elements:

- When select or unselect the parent level, all children will be select or unselect correspondingly.
- Select the check box before servers and pages, or just select **Select All** to select all the clips in all the available servers.
- Every server includes 10 pages (from 0-9), every page includes 9 banks (from 1-9), each bank includes 10 columns (from 0-9).

- The server name on XFile3 UI is the SDTI network name of server, but if server name is blank in server, the serverID number will be displayed instead.
- The total clip number can be displayed besides each server name, page or banks between brackets.

3.2.3. Templates Zone

The templates zone displays all the templates that can be used while auto archiving clips.


Without Transcoding

- - Avid MXF OPAtom
- - EVS MXF
- - MXF OP1a SMPTE
- - QuickTime Movie

With Transcoding

- 1080i - AVC - Intra 100 MXF OP1a SMPTE
- 1080i - Avid DNxHD VC -3 100Mbps MXF OP1a SMPTE
- 1080i - DVCPRO HD QTMov
- 1080i - MJPEG 4Band XT1 EVS MXF
- 1080i - ProRes 422 LT100 Mbps QTMov
- 720p - AVC-Intra 100 MXF OP1a SMPTE
- 720p - Avid DNxHD VC-3 100Mbps MXF OP1a SMPTE
- 720p - DVCPRO HD QTMov
- 720p - MJPEG 4Band XT1 EVS MXF
- 720p - ProRes 422 LT 100 Mbps QTMov

How to Edit Template

To edit template, select a reference template and click on the **Edit button** , the TemplateEditor Window pops up, the user can modify the corresponding values. After modification, the user is permitted to perform a **Save As** and create it as a new template with a new name, or the user may click **Cancel** to abort this modification.

It is currently not possible to delete any templates defined in the XFile3 version1.




Note

To get more information about editing template, click **?>Help** on XSquare application.

3.2.4. Destinations Zone

You must select the corresponding template from **Templates Zone** before choosing the required destination(s).

How to Select Destination

To select a destination path, the user clicks **Browse**  button, the window named **Browse For Folder** pops up, select the desired destination path to write the archived clips to and click **OK**.

The number of destination fields will vary from the different formats included in the Template Zone, For example, if the selected template includes destinations, then two fields will be displayed to be entered.

Example:



If a template has been selected since the last archive, it can still be applied in the next archive if has not been changed yet.

3.2.5. Filters Zone


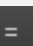






XFile3 allows users to define different filters in Auto Archive Mode. These filters are additional rule criteria to facilitate very complex jobs if desired.

The Filters Zone includes five kinds of filters:

  - Pref Cam
- Date&Time
- Camera
- Rating
- Archive Flag
- Keywords Grid


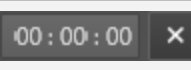
Pref Cam


The Pref Cams filter makes it possible to only include in the autobackup rule, the clips that were recorded from any camera defined as the first preferential camera (*) or on the second preferential camera (=). By default, no pref cam is selected, all cameras are included.

Filter	Description
 	All cameras are both included in autobackup rule.
 	Only the first and second preferential cameras are included in autobackup rule.
 	Only the first preferential camera is included in autobackup rule.
 	Only the second preferential camera is included in autobackup rule.

Date&Time


The filter makes it possible to include in the autoarchive rule, the clips that were created between the required date and time. By default, no date & time is selected.

Filter	Description
	The required date is selected with the format: date/month/year.
	The required time is selected with the format: hour:minute:second.

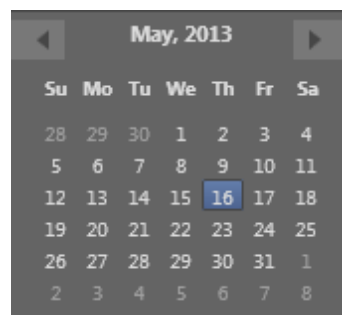

To set the date, select the date button  to activate the calendar, select the month and then the day of the month.

To set the time, select the time area and input the desired time.

You can click **Cancel**  to clear the defined date and time.



Note

Date & Time filter is based on Primary TC.

Camera




The camera filter makes it possible to select the clips to be included in the autoarchive. By default, the cameras are not selected, all cameras are included.

The different cameras are shown as following:

Filter	Description
A	Backup only clips stored as A clips
B	Backup only clips stored as B clips
C	Backup only clips stored as C clips
D	Backup only clips stored as D clips
E	Backup only clips stored as E clips
F	Backup only clips stored as F clips

Rating

The Rating filter makes it possible to include the autoarchive the clips that were in the required rating level. By default, no rating is selected, all ratings are included.

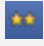Rating	Description
	Clips without rating
	Clips with rating one
	Clips with rating two
	Clips with rating three

Archive Flag





The Archive Flag filter makes it possible to include in the autoarchive the clips that were archived or not archived. By default, no archive flag is selected.



: Only include the clips which are not flagged for archived.




: Only include the clips which are flagged to be archived.

Filter	Meaning
 + 	All the clips will be archived, no archive flag selected
 + 	All the "not flagged to be archived" and "flagged to be archived" clips will be archived

Filter	Meaning
 + 	All the "flagged to be archived" clips will be archived
 + 	All the "not flagged to be archived" clips will be archived

Keywords Grid

The keywords filter makes it possible to include in the autoarchive only the clips toggled with the selected keywords. By default, no keyword is selected.

Click  to activate Keyword Grid Window.

All the keywords listed in this window are from all the detected servers. The list reflects all keywords that currently exist on the clips that exist.

The user can select the required keywords in this window.



3.2.6. How to Create an Autobackup Rule

To create an autoback rule, proceed as follows:

1. Select the source EVS Server and/or Page/Bank to autoarchive. The check boxes of the pages in the Sources Zone will be selected.
2. Select the template in the Templates Zone to specify the file format.

3. Select the destinations in the Destinations Zone to specify where clips will be archived.
4. Select different filters if desired.
5. Click **Create autobackup rule**. A new rule will be created and displayed in the Job Zone.

All the clips in the selected pages within the defined filters will automatically be archived onto the specified destination.

All the previously selected sources will be unselected automatically upon creation of the rule.

3.2.7. Job Zone

After creating a new rule, the jobs will be displayed at the bottom of Auto Archive UI.

You can click the arrow beside the rule to fold or unfold the jobs in the rule.

You can also delete a rule or job.

	Source	TemplateName	Destination	From	To	Pref cam	Camera	Rating	Archive	Keywords	Actions	Status
Rule 12	-----	To EV3MMF file	G\								Delete	0 completed jobs / 93 matching jobs
	Source	ClipName	Format	Destination	RemainingTim	Speed	Status	Actions	Comments			
	111A			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to generate L6			
	012C			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to open XT me			
	012B			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to open XT me			
	012A			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to open XT me			
	011F			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to open XT me			
	011E			G\	<div></div>	0 Ffm/s	Failed	<div>Cancel</div> <div>Process ASAP</div>	From XSquare: Failed to open XT me			

Rule

Every rule includes several values you have defined before creating rules.

Area	Description
Rule Name	The name of rule is defined by a number automatically incremented.
Source	Displays the name of the selected server(s) .
TemplateName	Displays the chosen template.
Destination	Displays the selected destination.
From	Displays the starting date and time
To	Displays the ending data and time
Pref Cam	Displays the selected pref cam
Camera	Displays the selected cameras
Rating	Displays the selected rating
Archive	Displays the selected archive flag
Keywords	Displays the selected keywords in Keywords Grid

Area	Description
Actions	Area enables you to delete this rule
Status	Displays the number of completed jobs and matching jobs with the format: n completed jobs/n matching jobs.

Job

All the jobs meet the conditions of the specific rule will be displayed in the rule.

Area	Description
Source	Displays the LSMID of each job.
ClipName	Displays the name of the current archived clip.
Format	Displays the format which has been selected in the Template Zone.
Destination	Displays the destination where the archived clips will be stored.
Remaining _ time	Displays the remaining time of each job.
Speed	Displays the current archiving speed of each job.
Status	Displays the job status, refer to "Job Status" for more details.
Action	Enables you to delete this job or change the priority of the current job.
Comments	Displays the information from XSquare and XFile3.

Job Status

Six kinds of job status are available in Job Zone to specify the exact status of the current job.


Job Status	Description
Waiting	The job has been created and stored in the XFile3DataBase.
Scheduled	The job has been sent to XSquare and is scheduled to be proceeded.
Running	The job is processing.
Completed	The job is finished successfully.
Failed	The job is unsuccessful.
cancelled	The job has been cancelled.



Note

When a job is completed, the job will disappear from Job Zone, but you can see all the completed jobs in Monitoring Mode.

The following diagram specifies the conversion between different status.

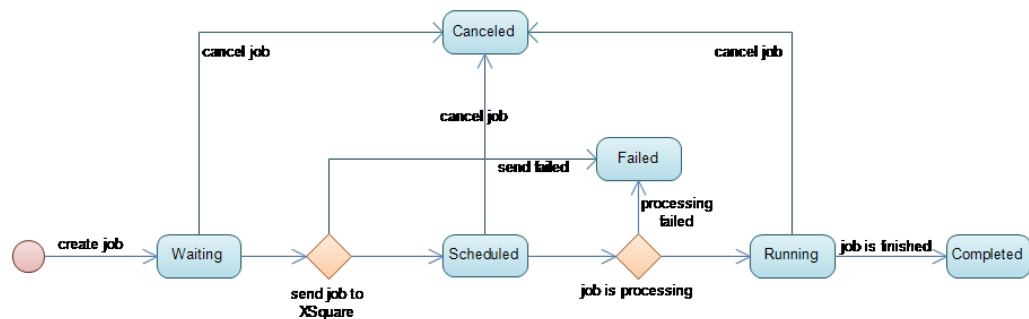


How to Select Jobs

All the selected jobs are highlighted in blue color.

Four possible selection ways are available:

- Click on one job, then the job will be selected.
- Click on one job, then press **CTRL** from keyboard, and simultaneously click other jobs one by one to add to the selection, with this method, all the clicked jobs will be selected.
- Click on one job, then press **SHIFT** from keyboard, and click any other jobs, then all the jobs between those two selected jobs will be selected.
- Press **CTRL+A** to select all the jobs.

How to Sort Jobs

To sort a column in alphabetical or numerical order, unfold the jobs and click on the column label to display the arrow buttons  and click again to invert the sorting.




Note

Destination and Action can't be sorted.

How to Cancel Jobs

To cancel jobs, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Cancel**.

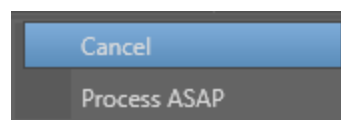

OR

Click **Cancel** in Actions column.

3. The status of the job will be cancelled.

**Note**

 
Only the jobs with **Waiting**, **Scheduled** and **Running** status can be cancelled.

How to Change Job Priority

Changing job priority means moving the selected job to the first position in the Scheduled job queue for the job to be processed in priority.

To change job priority, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Process ASAP**.



OR

Click **Process ASAP** in Actions column.

3. The job will be processed soon with high priority.

**Note**

Only the priority of jobs with the **Scheduled** status can be changed.


3.3. Archive Mode

3.3.1. Archive Overview

Archive Mode is used to archive the source clips from the requested servers to the requested formats and destinations manually.

Click  to enter Archive mode.


The screen shot below shows various areas of Archive Main Window.

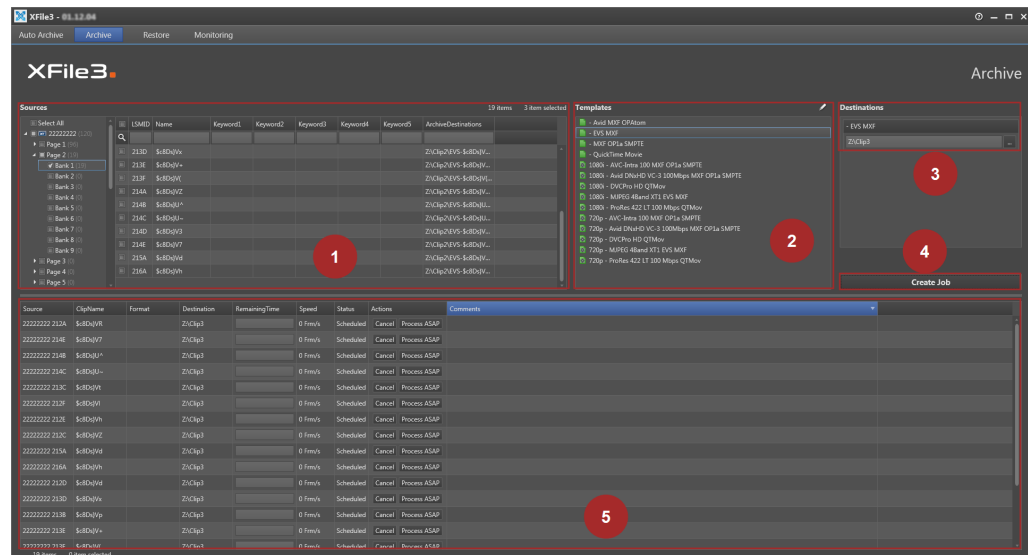

Area	Name	Description
1	Sources Zone	Area that displays all the detected servers and their clip structures, including the pages and banks
2	Templates Zone	Area that displays the templates available from XSquare.
3	Destinations Zone	Area that displays all the destinations matching the selected template.
4	Create Job	Button to create archive job.
5	Job Zone	Area that displays all the created rules and all the job status.

3.3.2. Source Zone

Server List

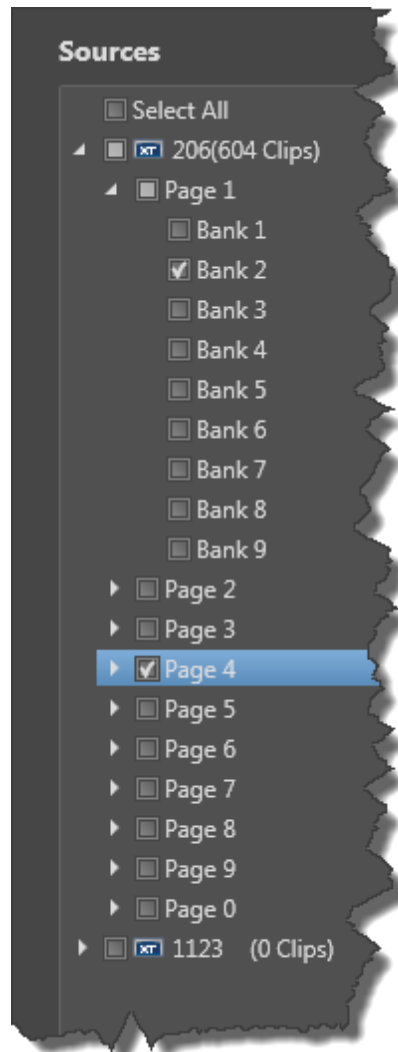

The Sources Zone includes the following elements:

- When select or unselect the parent level, all children will be select or unselect correspondingly.
- Select the check box before servers and pages, or just select **Select All** to select all the clips in all the available servers.
- Every server includes 10 pages (from 0-9), every page includes 9 banks (from 1-9), each bank includes 10 columns (from 0-9).
- The server name on XFile3 UI is the SDTI network name of server, but if server name is blank in server, the serverID number will be displayed instead.

- The total clip number can be displayed besides each server name, page or banks between brackets.

Sources List



<input type="checkbox"/>	LSMID	Name	Keyword1	Keyword2	Keyword3	Keyword4	Keyword5	ArchiveDestinations
<input type="checkbox"/>	111A	CLIP001						
<input type="checkbox"/>	111B	CLIP002						
<input type="checkbox"/>	111C	CLIP003						
<input type="checkbox"/>	111D	CLIP004						
<input type="checkbox"/>	111E	CLIP005						
<input type="checkbox"/>	111F	CLIP006						
<input type="checkbox"/>	112A	CLIP007						
<input type="checkbox"/>	112B	CLIP008						
<input type="checkbox"/>	112C	CLIP009						
<input type="checkbox"/>	112D	CLIP010						
<input type="checkbox"/>	112E	CLIP011						
<input type="checkbox"/>	112F	CLIP012						
<input type="checkbox"/>	113A	CLIP013						
<input type="checkbox"/>	113B	CLIP014						
<input type="checkbox"/>	113C	CLIP015						
<input type="checkbox"/>	113D	CLIP016						
<input type="checkbox"/>	113E	CLIP017						



Sources List only displays the clips from the specific banks or pages in the selected servers, it includes the following elements:

- Select the check box before LSMID to select all the clips in the specific banks or pages of the selected servers.
- Each clip includes some metadata: LSMID, Name, Keywords(from 1-5), Archive Destinations.

Clip Information	Description
LSM ID	Displays ID assigned to the clips using its page, bank, row and camera number.
Name	Displays the name assigned to the clip.
Keyword1	Displays the first keyword assigned to the clip.
Keyword2	Displays the second keyword assigned to the clip.
Keyword3	Displays the third keyword assigned to the clip.
Keyword4	Displays the fourth keyword assigned to the clip.
Keyword5	Displays the fifth keyword assigned to the clip.
Archive Destination	Displays the path where the backup file is located on local disks, if backed up previously.

How to Sort Clips


To sort a column in alphabetical or numerical order, click on the column label to display the arrow button   and click again to invert the sorting.

<input type="checkbox"/>	LSMID	Name 
		
<input type="checkbox"/>	110F	EVS--111D (1)
<input type="checkbox"/>	110E	EVS--111D (1)

How to Search Clips

To search clips, you only need to input the characters whose name includes this character in the **Quick Search Tool**, all the clips include the characters will display on **Sources List**.

<input type="checkbox"/>	LSMID	Name
	121 	
<input type="checkbox"/>	121A	tr

To clear the search filter, you can click  in the **Quick Search Tool**.



Note

The above **Source List** area is the same as that in Restore Mode.

3.3.3. Templates Zone

The templates zone displays all the templates you will use while archiving clips, after archiving, all the archived clips can be transferred to the format you selected in the Template Zone.

Without Transcoding


- - Avid MXF OPAtom
- - EVS MXF
- - MXF OP1a SMPTE
- - QuickTime Movie

With Transcoding

- 1080i - AVC - Intra 100 MXF OP1a SMPTE
- 1080i - Avid DNxHD VC -3 100Mbps MXF OP1a SMPTE
- 1080i - DVCPRO HD QTMov
- 1080i - MJPEG 4Band XT1 EVS MXF

- 1080i - ProRes 422 LT 100 Mbps QTMov
- 720p - AVC-Intra 100 MXF OP1a SMPTE
- 720p - Avid DNxHD VC-3 100Mbps MXF OP1a SMPTE
- 720p - DVCPro HD QTMov
- 720p - MJPEG 4Band XT1 EVS MXF
- 720p - ProRes 422 LT 100 Mbps QTMov

How to Edit Template

To edit template, select a reference template and click on the **Edit button** , the TemplateEditor Window pops up, the user can modify the corresponding values. After modification, the user is permitted to perform a **Save As** and create it as a new template with a new name, or the user may click **Cancel** to abort this modification.

It is currently not possible to delete any templates defined in the XFile3 version1.




Note

To get more information about editing template, click **?>Help** on XSquare application.

3.3.4. Destinations Zone


You must select the corresponding template from **Templates Zone** before choosing the required destination(s).

How to Select Destination

To select a destination path, the user clicks **Browse**  button, the window named **Browse For Folder** pops up, select the desired destination path to write the archived clips to and click **OK**.

The number of destination fields will vary from the different formats included in the Template Zone, For example, if the selected template includes destinations, then two fields will be displayed to be entered.

Example:

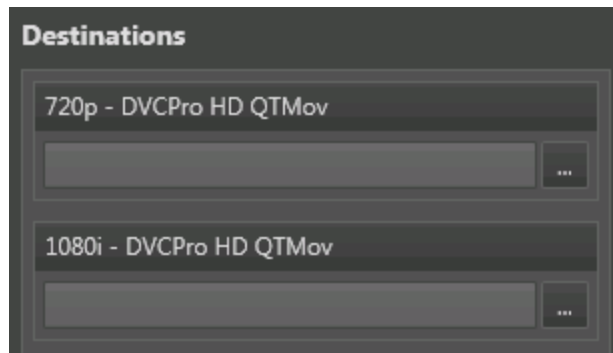

If a template has been selected since the last archive, it can still be applied in the next archive if it has not been changed yet.

3.3.5. How to Create Archive Jobs

To create archive jobs, proceed as follows:

1. Select the source clips to archive. The check boxes of the pages in the Sources Zone will be selected. You can select the clips to be archived in the Source List by ticking the check box.
2. Select the template in the Templates Zone to backup the clips in the selected format.
3. Select the destinations in the Destinations Zone to store the archived clips in the local destinations.
4. Click **Create Job**. All the jobs will be created and displayed in the Job Zone.

3.3.6. Job Zone

After create jobs, all the jobs will display at the bottom of Archive UI.

Source	ClipName	Format	Destination	RemainingTime	Speed	Status	Actions	Comments
----- 223C	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 222B	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 225E	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 224D	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 234D	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 254B	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 253B	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 255E	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
----- 255C	mulA		G:\		0 Frm/s	Waiting	Cancel Process ASAP	
134 items 1 item selected								

Job

All the jobs created manually are displayed on the Job Zone.

Area	Description
Source	Displays the LSMID of each job
ClipName	Displays the name of the current archived clip.

Area	Description
Format	Displays the format which has been selected in the Template Zone.
Destination	Displays the destination where the archived clips will be stored.
Remaining _ time	Displays the remaining time of each job.
Speed	Displays the current archiving speed of each job.
Status	Displays the job status, refer to "Job Status" for more details.
Action	Enables you to delete this job or change the priority of the current job.
Comments	Displays the information from XSquare and XFile3.

Job Status

Six kinds of job status are available in Job Zone to specify the exact status of the current job.


Job Status	Description
Waiting	The job has been created and stored in the XFile3DataBase.
Scheduled	The job has been sent to XSquare and is scheduled to be proceeded.
Running	The job is processing.
Completed	The job is finished successfully.
Failed	The job is unsuccessful.
cancelled	The job has been cancelled.



Note

When a job is completed, the job will disappear from Job Zone, but you can see all the completed jobs in Monitoring Mode.

The following diagram specifies the conversion between different status.

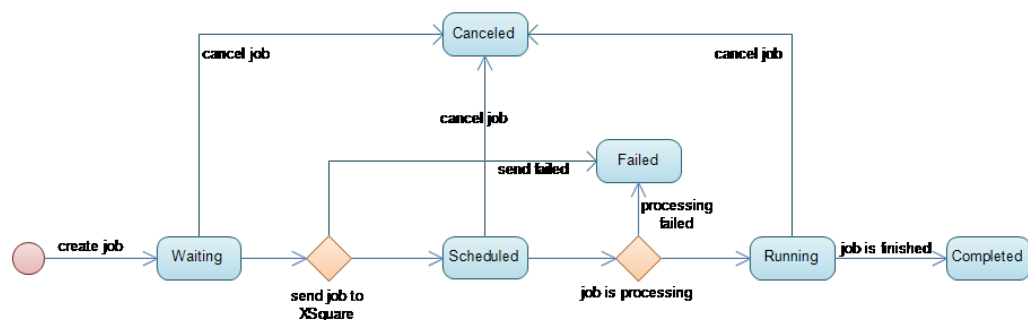


How to Select Jobs

All the selected jobs are highlighted in blue color.

Four possible selection ways are available:

- Click on one job, then the job will be selected.
- Click on one job, then press **CTRL** from keyboard, and simultaneously click other jobs one by one to add to the selection, with this method, all the clicked jobs will be selected.
- Click on one job, then press **SHIFT** from keyboard, and click any other jobs, then all the jobs between those two selected jobs will be selected.
- Press **CTRL+A** to select all the jobs.

 
How to Sort Jobs

To sort a column in alphabetical or numerical order, click on the column label to display the arrow buttons  and click again to invert the sorting.

How to Cancel Jobs

To cancel jobs, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Cancel**.



OR

Click **Cancel** in Actions column.

3. The status of the job will be cancelled.



Note

 
Only the jobs with **Waiting**, **Scheduled** and **Running** status can be cancelled.

How to Change Job Priority

Changing job priority means moving the selected job to the first position in the Scheduled job queue for the job to be processed in priority.

To change job priority, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Process ASAP**.



OR

Click **Process ASAP** in Actions column.

3. The job will be processed soon with high priority.



Note

Only the priority of jobs with the **Scheduled** status can be changed.


3.4. Restore Mode

3.4.1. Restore Overview

Click **Restore** to enter Restore mode.

Clips can be restored from a local destination to any EVS video server on the network.

The screen shot below shows various areas of Restore Main Window.

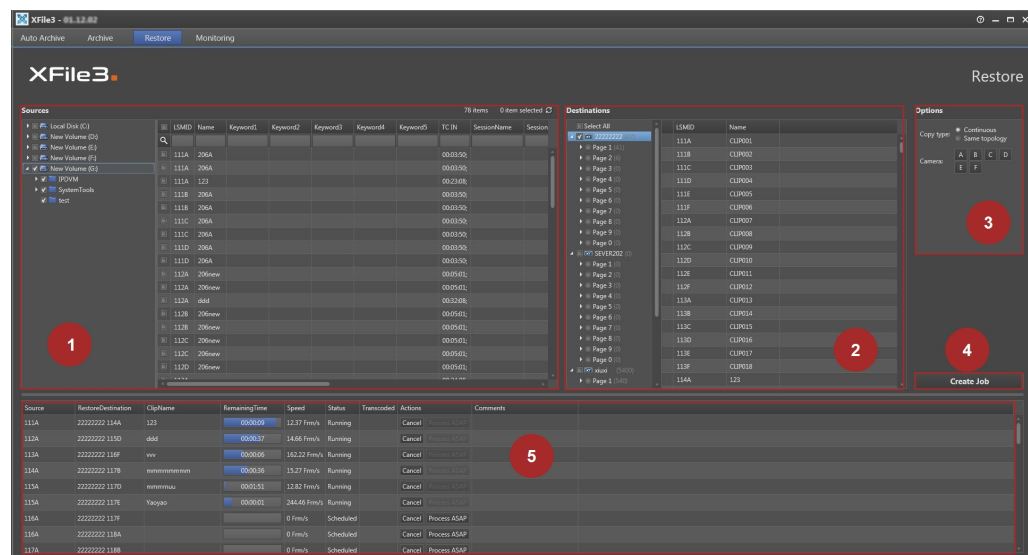


Area	Name	Description
1	Sources Zone	Area that displays all the sources in the detected destinations, including the local path, folders, subfolders and clips' metadata in the selected destination or folders. Area that displays all clips from the selected directories of the selected hard drives.
2	Destinations Zone	Area that displays all the detected servers and their structures, including the pages, banks and the metadata of all the clips.
3	Option Zone	Area that displays the copy type.

Area	Name	Description
4	Create Job	Button to create restore jobs.
5	Job Zone	Area that display all the created jobs and status..

3.4.2. Sources Zone

Hard Drive List

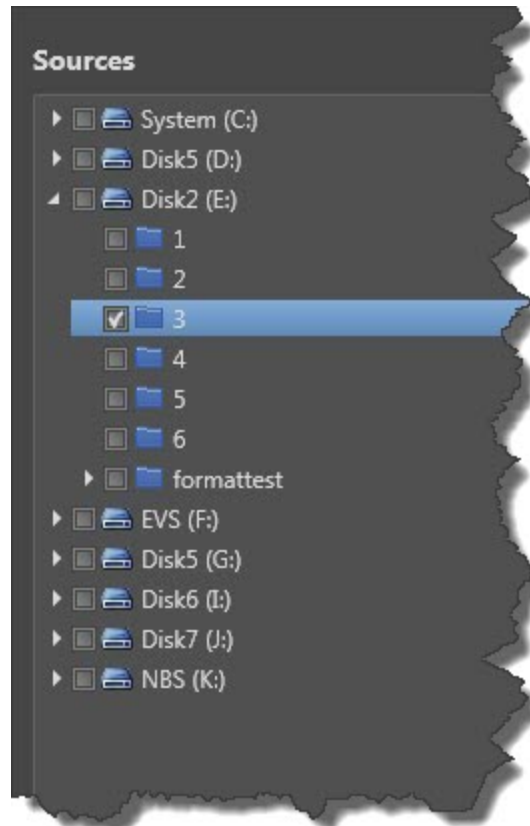

Hard Drive List includes the following elements:

- Select the check box before hard drive or folders to select the clips in the selected hard drive.
- Click on one folder, then press **SHIFT** from keyboard, and click any other folders, then all the folders between those two selected folders will be selected.
- Each includes several folders and the subfolders.
- Click **Refresh** button to refresh the detected hard drives.

Sources List

<input type="checkbox"/>	LSMID	Name	Keyword1	Keyword2	Keyword3	Keyword4	Keyword5	TC IN	SessionName	SessionDate	SessionSport	SessionCompetition
<input type="checkbox"/>	111A	haha						15:56:00;				
<input type="checkbox"/>	111A	ccgggç	33333	test2	player_A:							
<input checked="" type="checkbox"/>	111A	haha						15:56:00;				
<input type="checkbox"/>	111A	haha						15:56:00;				
<input type="checkbox"/>	111B	2222										
<input type="checkbox"/>	111B	haha						15:56:00;				
<input type="checkbox"/>	111D	haha						15:56:00;				
<input type="checkbox"/>	111E	test123						10:04:00;				
<input type="checkbox"/>	111F	hahapl	action_1	player_A:	player_B:			15:56:00;				
<input type="checkbox"/>	112A	hahapl	action_1	player_A:	player_B:			15:56:00;				
<input type="checkbox"/>	112B	haha						15:56:00;				
<input type="checkbox"/>	112C	haha						15:56:00;				
<input type="checkbox"/>	112D	haha						15:56:00;				
<input type="checkbox"/>	112E	haha						15:56:00;				
<input type="checkbox"/>	112F	haha						15:56:00;				
<input type="checkbox"/>	113B	haha						15:56:00;				
<input type="checkbox"/>	113C	haha						15:56:00;				

Sources List only displays the clips from the specific banks or pages in the selected servers, it includes the following elements:


- Select the check box before LSMID to select all the clips in the specific banks or pages of the selected servers.
- Each clip includes some metadata: LSMID, Name, Keywords(from 1-5), TC IN, session metadata, path and Restore Destinations.

Clip Information	Description
LSM ID	Displays ID assigned to the clips using its page, bank, row and camera letter.
Name	Displays the name assigned to the clip.
Keyword1	Displays the first keyword assigned to the clip.
Keyword2	Displays the second keyword assigned to the clip.
Keyword3	Displays the third keyword assigned to the clip.
Keyword4	Displays the fourth keyword assigned to the clip.
Keyword5	Displays the fifth keyword assigned to the clip.
TC IN	Displays the TC IN assigned to the clip.
Session Metadata	Session metadata includes eight kinds of metadata assigned to the clip: SessionName, SessionDate, SessionSport, SessionCompetition, SessionCompetitionLevel, SessionLocation, SessionTeamA, SessionTeamB.
Path	Displays the file's path.
Restore Destination	Displays the path where the clip will be restored, or has been restored previously.

How to Search Clips


To search clips, you only need to input the characters whose name includes this character in the **Quick Search Tool**, all the clips include the characters will display on **Sources List**.



To clear the search filter, you can click  in the **Quick Search Tool**.

3.4.3. Destinations Zone

Server List

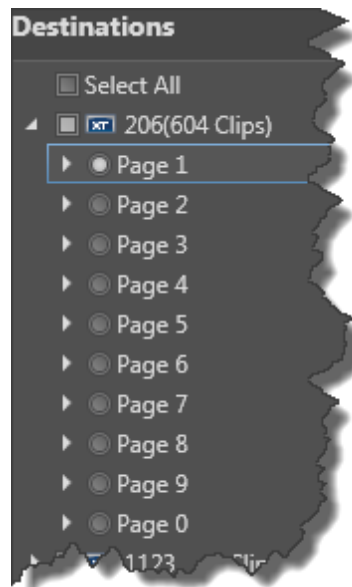

The Server List includes the following elements:

- Select the check box before servers and pages, or just select **Select All** to select all the positions in all the available servers.
- Every server includes 10 pages (from 0-9), every page includes 9 banks (from 1-9), each bank includes 10 columns (from 0-9).
- The server name on XFile3 UI is the SDTI network name of server, but if server name is null in server, the serverID number will be displayed instead.
- The total clip number can be displayed besides each server name, page or banks between brackets.

Destination List

	LSMID	Name
	141C	ddsa
	141D	ddsa
<input type="radio"/>	141E	
<input type="radio"/>	141F	
	142A	ddsa
	142B	ddsa
	142C	ddsa
	142D	ddsa
<input checked="" type="radio"/>	142E	
<input type="radio"/>	142F	
	143A	dfsfs
	143B	dfsfs
	143C	dfsfs
	143D	dfsfs
<input type="radio"/>	143E	
<input type="radio"/>	143F	
	144A	GGGGGG
	144B	GGGGGG

The Destination List only displays the positions from the specific banks or pages in the selected servers, it includes the following elements:

- Select the requested server, page or bank.
 - If the selection is from one server, all the positions in the selected server will be displayed at the right side of Destinations Zone. And then you can select one of the available position by ticking the check box as the starting point to restore clips, XFile3 restores from the first available position if you don't select a starting point.
 - If the selection is from more than one servers, all the positions in the selected servers will not be displayed out. And then you do not need to select a specific starting point, all the clips from the EVS servers will be restored from the first available position and restore the others one by one, all the selected clips will be restored respectively in all the selected servers.
- Each position includes some metadata: LSMID, name.
- A radio button is displayed in front of the empty positions.

3.4.4. Options Zone

Copy Type

You can choose to select the copy types, two copy types are available

Copy Type	Description
Continuous	The clips to be restored will be restored to the available positions one by one from the selected starting point, taking into consideration the filter options.
Same Topology	The topology position of all the restored clips will keep the same with that in EVS server. If the position to be restored is unavailable, the clip will not be restored. The first clip must correspond to the same page in EVS server, if not, the clip will not be restored, and other clips will keep the same topology as well.

Camera Filter

You can choose to restore the specific camera positions only. Only the clips with the selected cameras will be displayed, all clips in the selected folders are displayed by default.

Camera	Description
A	Restore only Camera A clips.
B	Restore only Camera B clips.
C	Restore only Camera C clips.
D	Restore only Camera D clips.
E	Restore only Camera E clips.
F	Restore only Camera F clips.

3.4.5. How to Create Restore Jobs

To create restore jobs, proceed as follows:

1. Select the source clips to restore. The check boxes before the required clips in Sources Zone will be selected.
2. Select one starting point in Destinations Zone to store the restored clips in the EVS video server if needed. If you have selected more than one servers, you don't need to select a specific starting point.
3. Select the Copy Type if needed. By default, Continuous is selected.
4. Select Camera Filter if needed. By default, no camera filter is selected.
5. Click **Create Job**. All the jobs will be displayed in the Job Zone.

3.4.6. Job Zone

After creating job, the jobs will be displayed at the bottom of Restore UI.

Source	ClipName	Format	Destination	RemainingTime	Speed	Status	Actions	Comments
xiuxi	112B	\$c8DtZAN	G:\		0 Frm/s	Failed	Cancel Process ASAP	From XSquare: Failed to generate...
xiuxi	112A	\$c8DtZAJ	G:\		0 Frm/s	Failed	Cancel Process ASAP	From XSquare: Failed to generate...
xiuxi	111F	\$c8DtZAF	G:\		0 Frm/s	Failed	Cancel Process ASAP	From XSquare: Failed to generate...
xiuxi	111E	\$c8DtZAB	G:\		0 Frm/s	Failed	Cancel Process ASAP	From XSquare: Failed to generate...
xiuxi	111D	\$c8DtZA7	G:\		0 Frm/s	Failed	Cancel Process ASAP	From XSquare: Failed to generate...

Area	Description
Sources	Displays all the selected clips
Restore Destination	Displays the restore positions on the EVS video server
ClipName	Displays the name of the current restored clip.
Remaining_time	Displays the remaining time of each job.
Speed	Displays the current archiving speed of each job.
Status	Displays the job status, refer to " Job Status " for more details.
Transcoded	This area displays the transcoded status of the restored clip. <ul style="list-style-type: none"> With icon: the clip is transcoded. Without icon: the clip is not transcoded.
Action	This area enables you to delete this job.
Comments	Displays the information from XSquare.

Job Status

Six kinds of job status are available in Job Zone to specify the exact status of the current job.


Job Status	Description
Waiting	The job has been created and stored in the XFile3DataBase.
Scheduled	The job has been sent to XSquare and is scheduled to be proceeded.
Running	The job is processing.
Completed	The job is finished successfully.
Failed	The job is unsuccessful.
Cancelled	The job has been cancelled.



Note

When a job is completed, the job will disappear from Job Zone, but you can see all the completed jobs in Monitoring Mode.

The following diagram specifies the conversion between different status.

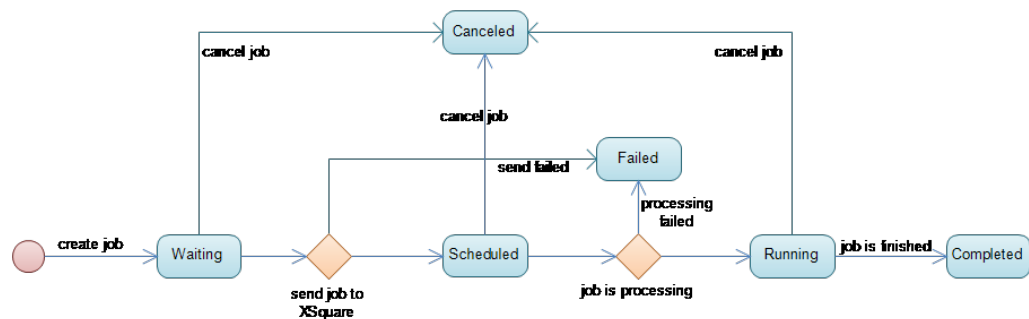


How to Select Jobs

All the selected jobs are highlighted in blue color.

Four possible selection ways are available:

- Click on one job, then the job will be selected.
- Click on one job, then press **CTRL** from keyboard, and simultaneously click other jobs one by one to add to the selection, with this method, all the clicked jobs will be selected.
- Click on one job, then press **SHIFT** from keyboard, and click any other jobs, then all the jobs between those two selected jobs will be selected.
- Press **CTRL+A** to select all the jobs.

How to Sort Jobs

To sort a column in alphabetical or numerical order, click on the column label to display the arrow button  and click again to invert the sorting.



 
Note

Transcode and Action columns can't be sorted.

How to Cancel Jobs

To cancel jobs, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Cancel**.



OR

Click **Cancel** in Actions column.

3. The status of the job will be cancelled.

**Note**

 
Only the jobs with **Waiting**, **Scheduled** and **Running** status can be cancelled.

How to Change Job Priority

Changing job priority means moving the selected job to the first position in the Scheduled job queue for the job to be processed in priority.

To change job priority, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Process ASAP**.



OR

Click **Process ASAP** in Actions column.

3. The job will be processed soon with high priority.

**Note**


Only the priority of jobs with the **Scheduled** status can be changed.

3.5. Monitoring Mode

3.5.1. Monitoring Overview

Click **Monitoring** to enter monitoring mode.

In Monitoring mode, you can see all the available hard disks and all the tasks in both Archive and Restore Modes.

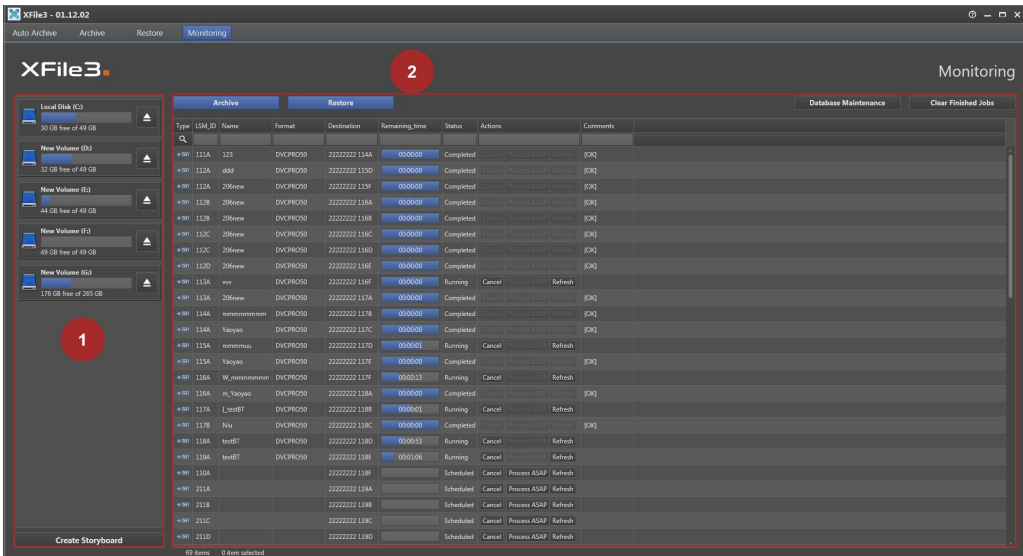


Area	Name	Description
1	Hard Disk Zone	Area to display all the detected hard disks.
2	Task Zone	Area to display all the tasks in Archive and Restore modes.

3.5.2. Hard Disk Zone



Hard Disks

Hard Disks zone displays all the hard disks detected by XFile3.

To eject the hard disk, click on .

Storyboard

What Is a Storyboard

A storyboard is a list of clip's content that is delivered with the current selected local hard drive. When the backup jobs are created, the operator can create it as a HTML file and store in the desirable position.

How to Create Storyboard

To create storyboard, proceed as follows:

1. Select the source hard drive.
2. Click **Create Storyboard**, when StoryboardOptionWindow pops up, select the choose for a requested path to store the storyboard.
3. Click **OK**, the storyboard will be stored in the requested path. To open this storyboard, you only need to open the file named *Storyboard.html* by web browser.

XFile3 version 01.08.02 File creation time: 2013/06/21 - 15:49:46												
Clip ID	Clip Name	TC IN	Duration	Keyword 1	Keyword 2	Keyword 3	Keyword 4	Keyword 5	Creation Date Time	Backup Date Time	Metadata Filename	File Size
111A *	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/19 15:09:09	EVS-rqada-111A.evs.xml	
111A *	NTSC-SOURCE	00:22:07:23	00:02:24:04	player_B20					2013/05/30 17:53:10	2013/06/13 11:05:36	EVS-NTSC-SOURCE-111A (1).evs.xml	
111A *	NTSC-SOURCE	00:22:07:23	00:02:24:04	player_B20					2013/05/30 17:53:10	2013/06/13 10:56:06	EVS-NTSC-SOURCE-111A.evs.xml	
111A *	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:39:04	EVS-rqada-111A (1).evs.xml	42MB
111A *		14:05:15:04	00:00:03:03						2013/05/09 14:05:30	2013/05/30 17:30:46	EVS-111A.evs.xml	26MB
111A *	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:19:57	EVS-rqada-111A.evs.xml	42MB
111A *	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:56:23	EVS-rqada-111A (2).evs.xml	42MB
111A *	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/19 17:52:58	EVS-rqada-111A.evs.xml	42MB
111A *	NTSC-SOURCE	00:22:07:23	00:02:24:04	player_B20					2013/05/30 17:53:10	2013/06/13 11:05:36	EVS-NTSC-SOURCE-111A (1).evs.xml	
111A *	NTSC-SOURCE	00:22:07:23	00:02:24:04	player_B20					2013/05/30 17:53:10	2013/06/13 10:56:06	EVS-NTSC-SOURCE-111A.evs.xml	
111B =	3232	13:46:06:06	00:00:11:27	player_A4	123456789012	player_B5			2013/05/31 14:36:50	2013/06/13 16:58:42	EVS-3232-111B.evs.xml	182MB
111B =	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 15:05:35	EVS-rqada-111B (3).evs.xml	42MB
111B =	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:19:06	EVS-rqada-111B.evs.xml	42MB
111B =	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 15:16:16	EVS-rqada-111B (4).evs.xml	42MB
111B =	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:35:21	EVS-rqada-111B (1).evs.xml	42MB
111B =	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/20 14:51:58	EVS-rqada-111B (2).evs.xml	42MB
111B =	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/18 14:36:48	EVS-rqada-111B.evs.xml	42MB
111B =	rqada	13:04:18:08	00:00:13:00						2013/06/07 17:55:31	2013/06/17 14:52:05	EVS-rqada-111B (2).evs.xml	42MB
111B =	rqada	17:55:14:01	00:00:13:00						2013/06/07 17:55:31	2013/06/18 14:37:44	EVS-rqada-111B (1).evs.xml	42MB

Storyboard displays the following elements of each clip:

Clip Information	Description
Clip ID	Displays the ID assigned to the clip.
Clip Name	Displays the name assigned to the clip.
TC IN	Displays the IN point of the clip assigned to the clip.
Duration	Displays the duration of the clip from IN to OUT assigned to the clip.
Keyword1	Displas the first keyword assigned to the clip.
Keyword2	Displas the second keyword assigned to the clip.
Keyword3	Displas the third keyword assigned to the clip.

Clip Information	Description
Keyword4	Displas the fourth keyword assigned to the clip.
Keyword5	Displas the fifth keyword assigned to the clip.
Creation Date Time	Displays the Date when the clip was created.
Backup Date Time	Displays the Date when the clip was backkured.
Metadata Filename	Displays the EVS XML file assigned to the clip.
File Size	Displays the file size assigned to the clip.

3.5.3. Job Zone


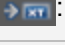
All the jobs in Monitoring mode synchronize those in AutoArchive, Archive and Restore modes, any changes made in Monitoring mode will happen in Monitoring mode as well.

Archive			Restore			Database Maintenance			Clear Finished Jobs	
Type	LSM_ID	Name	Format	Destination	Remaining_time	Status	Actions	Comments		
Q										
991	296F	\$-8Dz+W	DVCPRO HD	E:\formattest\FU1	00:00:00	Completed	Cancel Process ASAP Refresh	[OK]		
991	296E	\$-8Dz+S	DVCPRO HD	E:\formattest\FU1	00:00:00	Completed	Cancel Process ASAP Refresh	[OK]		
991	296D	\$-8Dz+O	DVCPRO HD	E:\formattest\FU1	00:00:00	Completed	Cancel Process ASAP Refresh	[OK]		
991	296C	\$-8Dz+K	DVCPRO HD	E:\formattest\FU1	00:00:00	Completed	Cancel Process ASAP Refresh	[OK]		
991	296B	\$-8Dz+G	DVCPRO HD	E:\formattest\FU1	00:00:00	Completed	Cancel Process ASAP Refresh	[OK]		
991	296A	\$-8Dz+C	DVCPRO HD	E:\formattest\FU1	00:00:09	Running	Cancel Process ASAP Refresh			
991	295F	\$-8Dz+B	DVCPRO HD	E:\formattest\FU1	00:00:20	Running	Cancel Process ASAP Refresh			
991	295E	\$-8Dz+4	DVCPRO HD	E:\formattest\FU1	00:00:17	Running	Cancel Process ASAP Refresh			
991	320A	\$-8Dz+W		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319F	\$-8Dz+S		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319E	\$-8Dz+O		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319D	\$-8Dz+K		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319C	\$-8Dz+G		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319B	\$-8Dz+C		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	319A	\$-8Dz+B		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	318F	\$-8Dz+4		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	318E	\$-8Dz+P		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	321D	\$-8Dz+J		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	321C	\$-8Dz+I		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	317F	\$-8Dz+Sx		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	317E	\$-8Dz+St		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	317D	\$-8Dz+Sp		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	317C	\$-8Dz+Sl		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	317B	\$-8Dz+Sh		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	314E	\$-8Dz+P		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			
991	314C	\$-8Dz+P		E:\formattest\FU1		Scheduled	Cancel Process ASAP Refresh			

Job Zone displays all the tasks in Archive (AutoArchive & Archive) and Restore modes.

Selection	Description
Archive + Restore	No tasks will be displayed out.
Archive + Restore	All tasks in Archive(autoarchive & archive) and Restore modes will be displayed out.
Archive + Restore	All tasks in Archive(autoarchive & archive) mode will be displayed out.
Archive + Restore	All tasks in Restore mode will be displayed out.

Job Zone displays different metadata about each job.


Metadata	Description
Type	 : Archive task(Archive & AutoArchive)  : Restore tasks
LSM_ID	Displays ID assigned to the clips using its page, bank, row and camera number.
Name	Displays the name assigned to the clip.
Destination	Displays the path where the clip is archived or restore.
Format	Displays the format of the current archived or restored clips.
Remaining_time	Displays the remaining time of each job.
Status	Displays the job status, refer to "Job Status" for more details.
Actions	Enables you to delete this job or change the priority of the current job.

Job Status

Six kinds of job status are available in Job Zone to specify the exact status of the current job.

Job Status	Description
Waiting	The job has been created and stored in DataBase.
Scheduled	The job has been sent to XSquare and is scheduled to be proceeded.
Running	The job is processing.
Completed	The job is finished successfully.
Failed	The job is unsuccessful.
Cancelled	The job has been cancelled.

The following diagram specifies the conversion between different status.

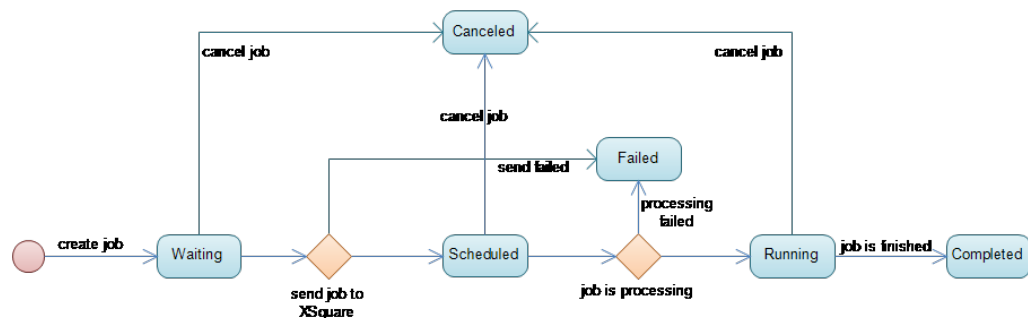

How to Select Jobs

All the selected jobs are highlighted in blue color.


Four possible selection ways are available:

- Click on one job, then the job will be selected.
- Click on one job, then press **CTRL** from keyboard, and simultaneously click other jobs one by one to add to the selection, with this method, all the clicked jobs will be selected.
- Click on one job, then press **SHIFT** from keyboard, and click any other jobs, then all the jobs between those two selected jobs will be selected.
- Press **CTRL+A** to select all the jobs.


How to Search Clips

To search clips, you only need to input the characters whose name includes this character in the **Quick Search Tool**, all the clips include the characters will display on **Sources List**.



To clear the search filter, you can click  in the **Quick Search Tool**.

How to Sort Jobs

To sort a column in alphabetical or numerical order, click on the column label to display the arrow button  and click again to invert the sorting.



 
Note

Action can't be sorted..

How to Cancel Jobs

To cancel jobs, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Cancel**.



OR

Click **Cancel** in Actions column.

3. The status of the job will be cancelled.



Note

 
Only the jobs with **Waiting**, **Scheduled** and **Running** status can be cancelled.

How to Change Job Priority

Changing job priority means moving the selected job to the first position in the Scheduled job queue for the job to be processed in priority.

To change job priority, proceed as follows:

1. Select the requested jobs.
2. Right click on the selected jobs and select **Process ASAP**.



OR

Click **Process ASAP** in Actions column.

3. The job will be processed soon with high priority.



Note


Only the priority of jobs with the **Scheduled** status can be changed.

How to Maintain Database

Click **Database Maintenance** to enter Database Monitor window.

The window enables you to do the following operations:

- See the size of DB file
- See the number of all jobs
- Delete [obsolete](#) jobs: When click on **Delete obsolete jobs**, all the obsolete jobs will be deleted.
- Delete [all jobs](#): When click on **Delete all jobs**, all the jobs will be deleted.
- Backup database and logs: When click on **Backup database and logs**, all XFile3 database and logs will be backedup.

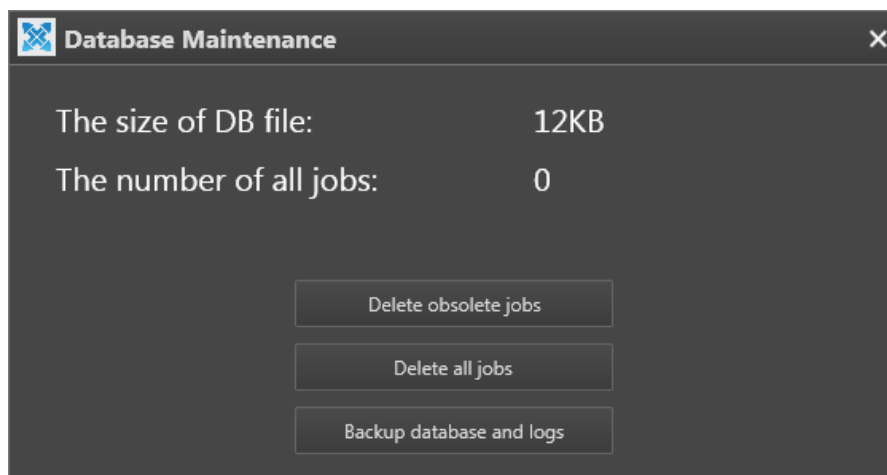

How to Delete Obsolete Jobs

To delete obsolete jobs, click on **Delete obsolete jobs**.

What Are Obsolete Jobs

Obsolete jobs include:

- Cancelled jobs
- Failed jobs
- The source clips related to the jobs have been deleted.

How to Delete All Jobs

To delete all jobs, click on **Delete all jobs**.

XFile3 will restart after deleting all jobs.

What Are All Jobs

All jobs include all the jobs created from both autoarchive, archive and restore modes.

How to Backup Database and Logs

To backup database and logs, click on **Backup database and logs**.

How to Clear [Finished Jobs](#)


To clear all the finished jobs, click on **Clear Finished Jobs** .


What Are Finished Jobs

Finished jobs include the job with the following status:

- Completed
- Failed
- Cancelled

3.6. About Window

To view product information of the current software version, you just need to click , and then a message box pops up.

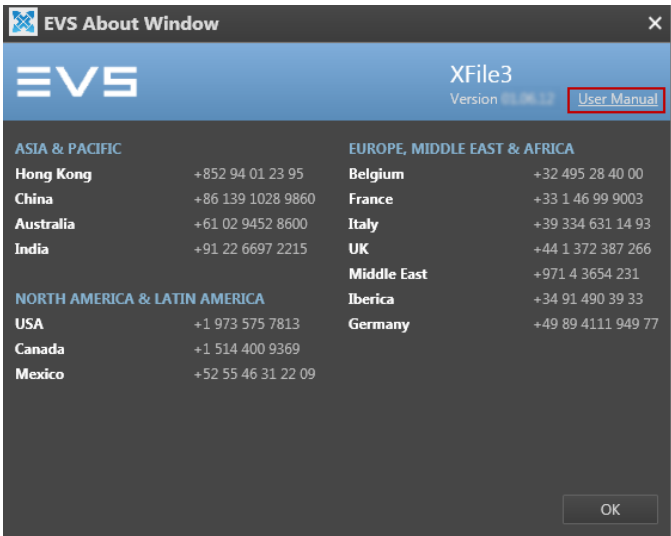

Click on **User's manual** link to open the PDF version of the current software version.

